Handle Removal Maintenance

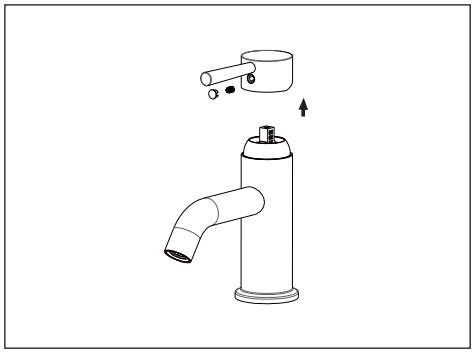

Turn off water and relieve pressure. Detach handle button using a small flathead screwdriver, unscrew set screw using Allen Wrench and take off handle.

Coupez l'eau et relâchez la pression. Détacher le bouton du manche à l'aide d'un tournevis à tête plate, devissez l'ensemble en utilisant la clé Allen et retirer la poignée.

Valve Cartridge Removal Maintenance

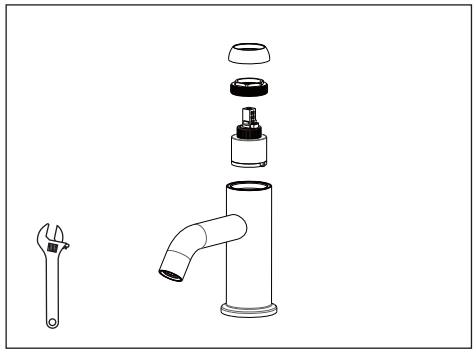

Remove handles. Unscrew Dome Cap counter clockwise by hand. Unscrew Retaining Nut using adjustable wrench, take out cartridge assembly and inspect. Replace parts as necessary. Reassemble parts by reversing steps.

Enlevez la manette. Dévissez le à la main dans le sens inverse des aguilles d'une montre. Dévissez l'écrou de retenue en utilisant une clé à molette, retirez la cartouche et l'inspecter. Remplacez les pièces si nécessaire. Remontez les pièces en inversant les étapes.

CAUTION: Maintenance

Replacement parts may be available at the store where you purchased your faucet.

Always turn off water and relieve pressure before working on your faucet.

TROUBLESHOOTING

If you've followed the instructions carefully and your faucet still does not work properly, take these corrective steps:

Problem | Problème	Cause	Action
Leaks underneath handle.	Cartridge has come loose.	Tighten the cartridge.
Aerator leaks or has inconsistent water flow. L 'aérateur fuit ou a écoulent n'est pas uniforme.	Aerator is dirty or worn out or misfitted. L 'aérateur est sale, usé, ou n'est pas bien fixee.	Unscrew the aerator to clean or replace washer, or replace the aerator.
Water will not shut off completely. L'eau ne s'arrete pas completement.	Dirty or worn out washer in cartridge. La rondelle en cartouche est sale ou usé.	Remove handle and cartridge to check if the washer is damaged permanently or dirty. Re-install cartridge.

Please call our Customer Service toll free line at 1-877-482-5422 for additional assistance or service.

EURO VESSEL SINK FILLER FAUCET

Model: LNF-EUV2

Fontaine by ITALIA

PACKING LIST

After you open this package, please check to ensure that all of the following items are included:

A) Faucet B) Mounting nut C) Flexible hoses (2) D) Allen Wrench E) Aerator Remover

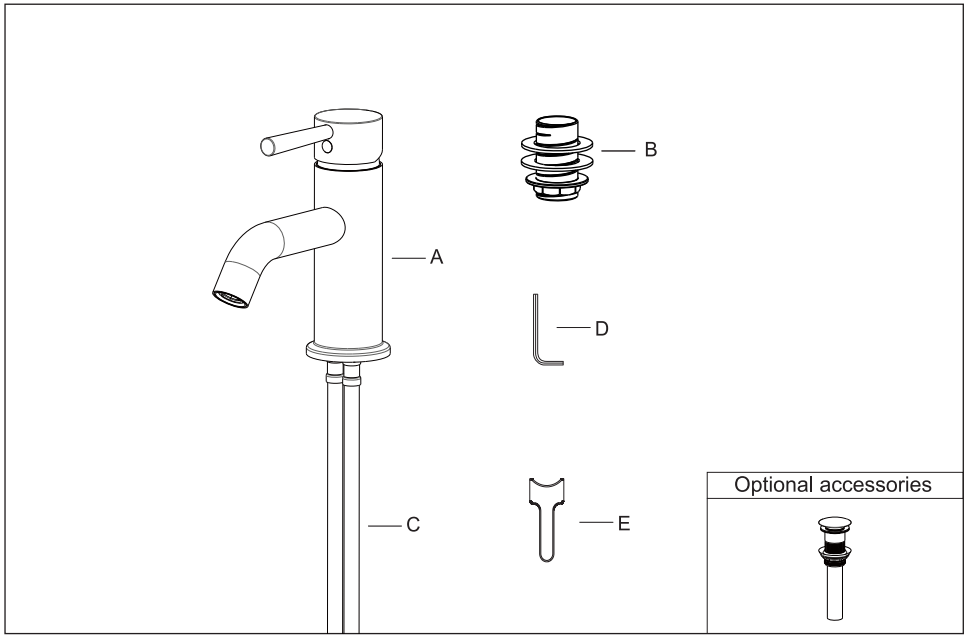

IMPORTANT NOTICE: For easy installation, please read all the instruction completely before beginning. Before installing this product, make sure that water line debris is cleared to avoid blockage.

YOU MAY NEED

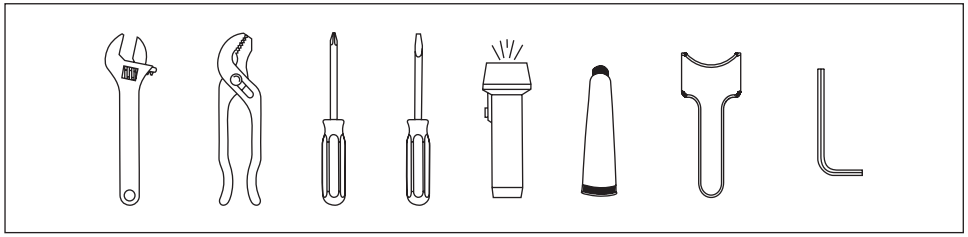

LNF-EUV2 2014.REV-A

INSTALLATION PROCEDURES

1

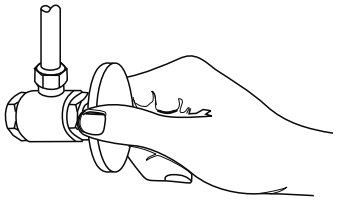

Remove any debris from valve outlets. Turn off the water supply valves. This is usually found near the water meters. If you are replacing an existing faucet, remove the faucet from the sink and clean the sink surface thouroughly.

2

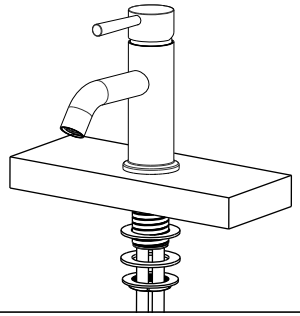

Install without Deck Plate. Make sure the O-RING is placed onto the bottom of the Base Ring. Install faucet through hole in sink. From underside of sink, attach mounting assembly. Position faucet on sink properly and tighten Mounting Nut.

3

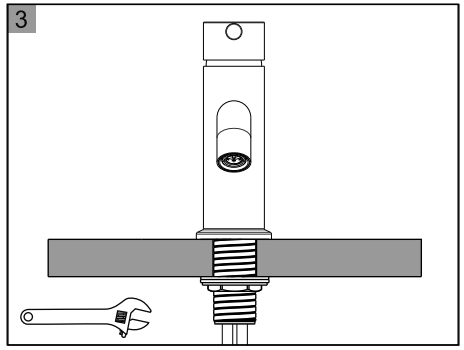

If necessary, tighten screws using an adjustable wrench until the faucet is firmly connected to the sink.

4

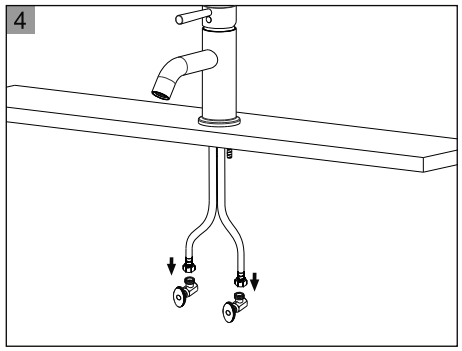

Connect hot and cold water supply lines to the water supply valves.

5

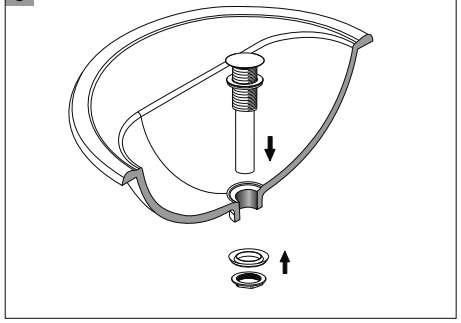

Unscrew locknut. Make sure the rubber washer is in the correct position under flange. Insert pup-up assembly into sink drain hole. From underneath, tighten with lockset.

6

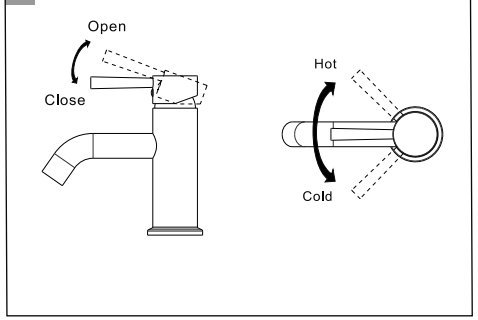

Lift the handle up and the cartridge will be activated allowing water to flow. The water flow will increase the further it is lifted up. By rotating the handle to the right, the water temperature will decrease to cold flow only. By rotating handle to the left, the water temperature will increase to hot only.

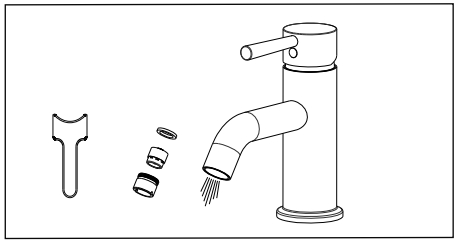

FAUCET START-UP

After installation is complete, remove aerator and rotate handle to the closed position. Turn on the water supply valves, and check all connections for a leak. Turn on your faucet and allow both hot and cold water to run at least one minute each. Replace aerator.

NOTES: Cleaning Instructions

To keep the faucet clean, you should clean the faucet frequently and regularly.

Clean the faucet with clear water or mild liquid, rinse the faucet with clear water and then dry the faucet with soft cotton cloths.

Do not use any abrasive cleansers, cloths, or paper towels.

Do not use any acid or abrasive detergent.